



# GBC® AdvancedPunch™ Plus Installation Instructions

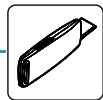

# 1.0 1.1 QC5 (AMS) / 450S03231 (EMEA)



## 1.2

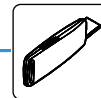

## 1.3



## 1.4



## 1.5



1.6

③

④

①

② 3.1

## 1.6

7715803




4.7

702P09503



②

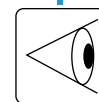

1.7 - 4.8



1.7



1.8



1.9




1.10



1.11



1.12

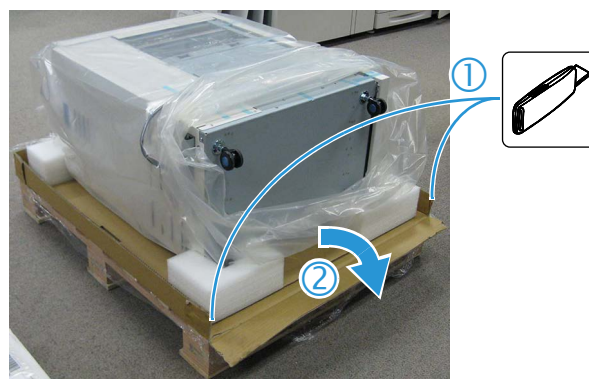




1.13



1.14

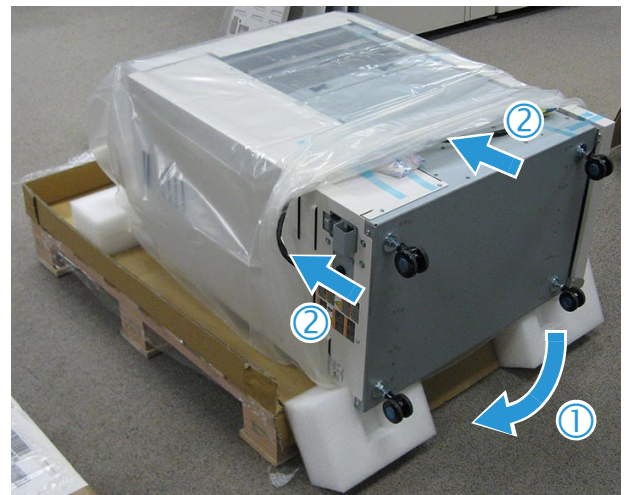


1.15



Casters  
DO NOT  
lock



1.16

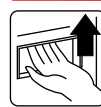

1.17




2.0 2.1





2.2



2.3

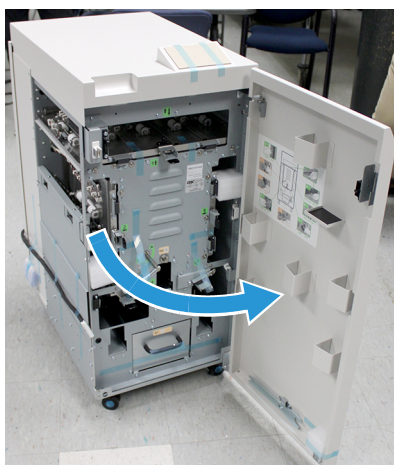


2.4

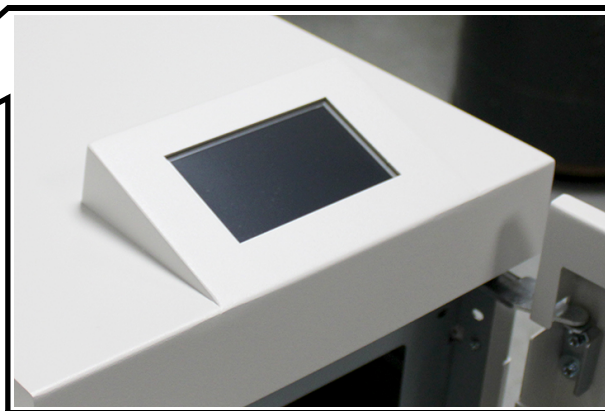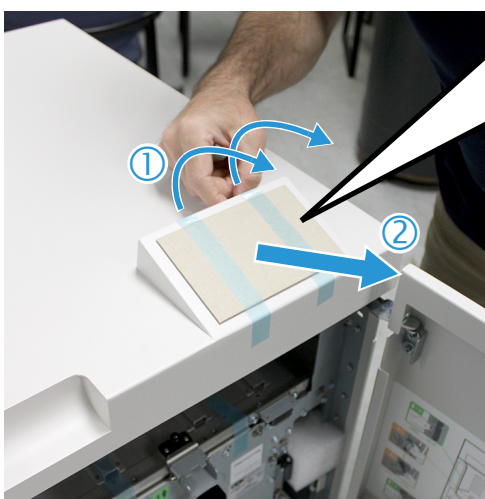





2.5

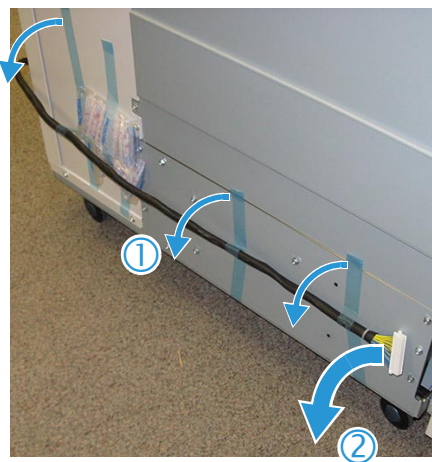


2.6

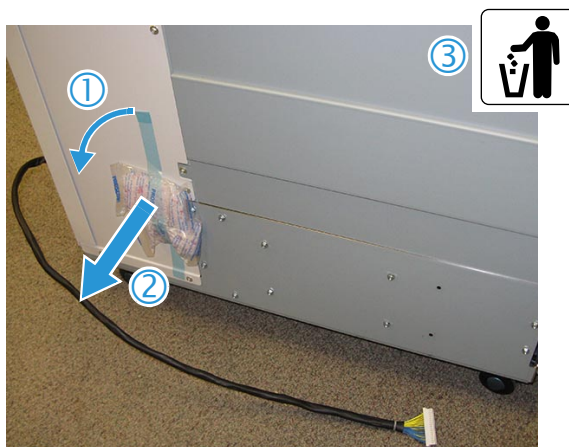


2.7

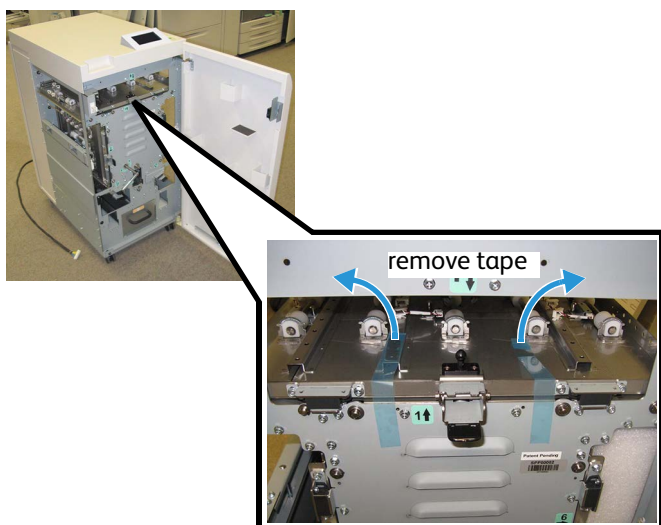


2.8

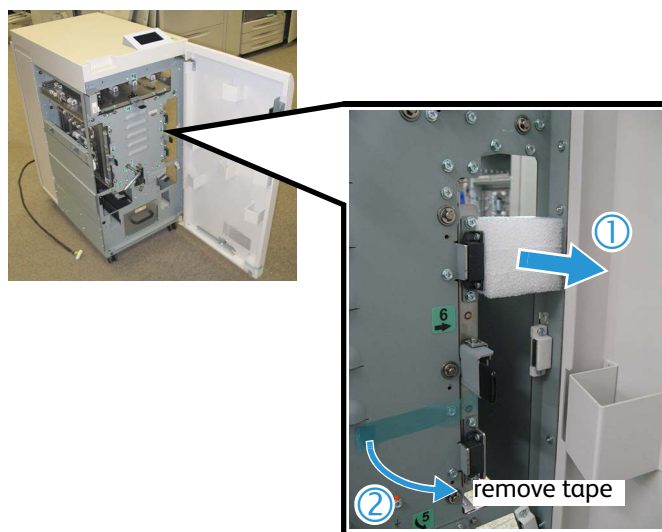



2.9

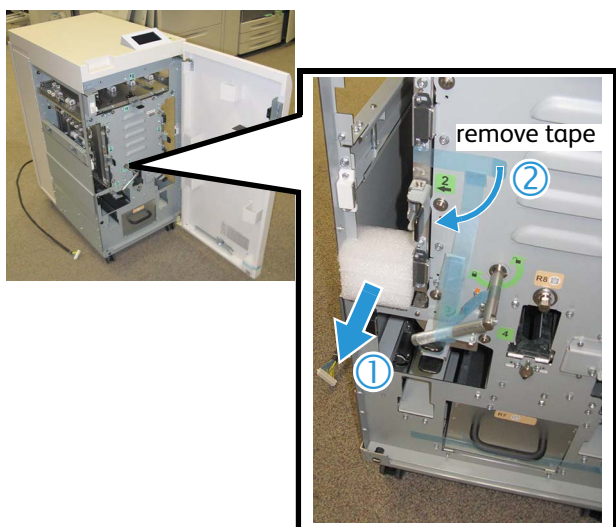



2.10

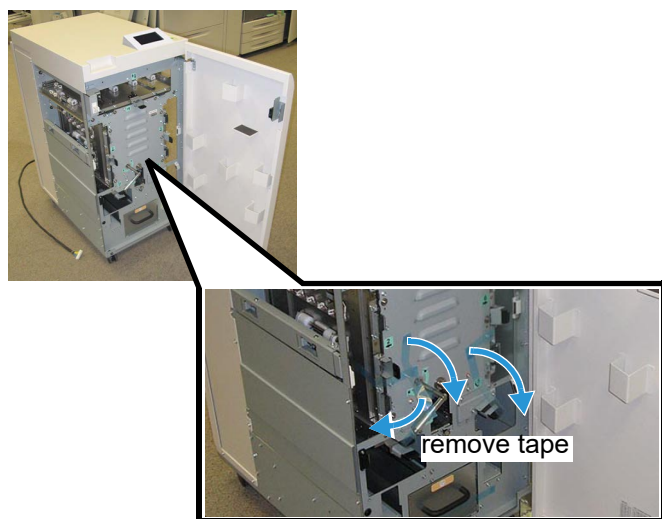

2.11

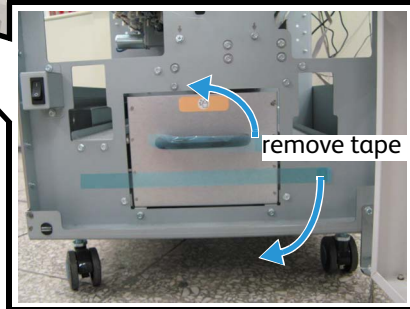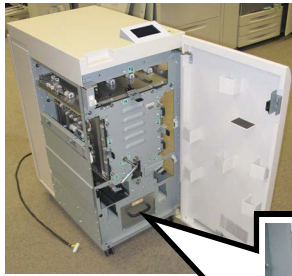



2.12

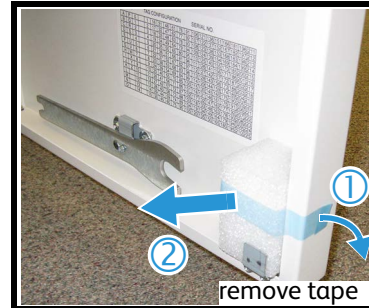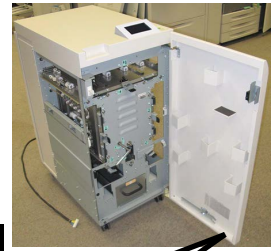

2.13






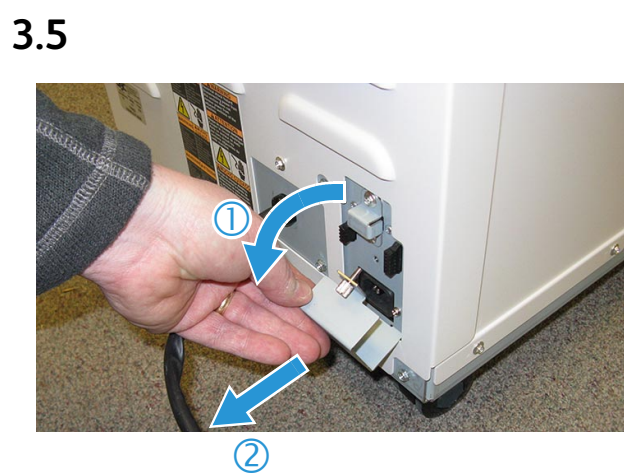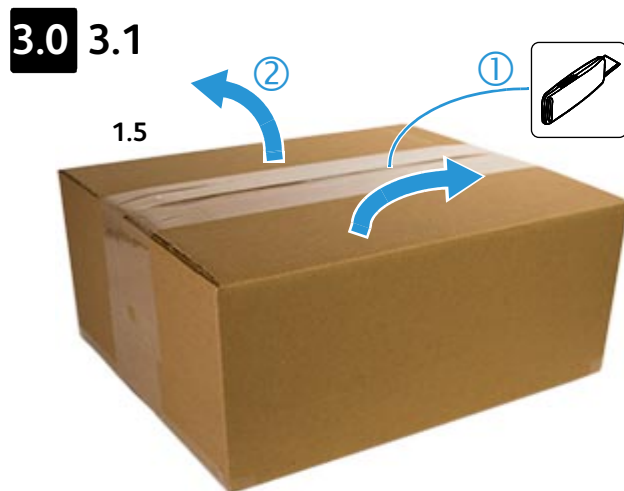


3.7



3.8

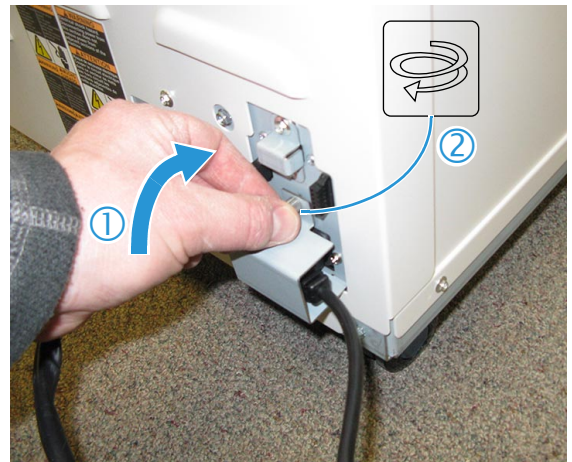


3.9

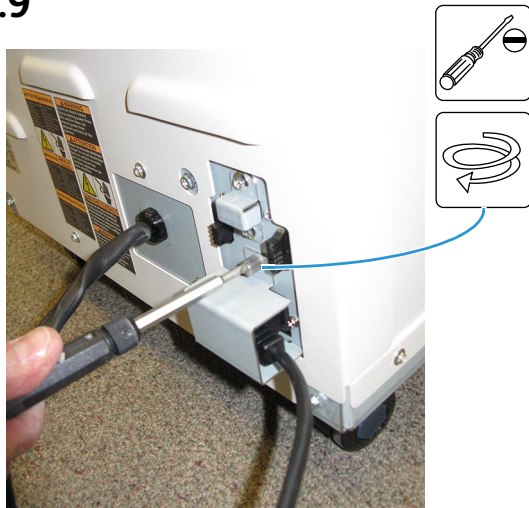




## 4.0 4.1

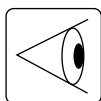

Check levelness with upstream module, if applicable.

## 4.2 If leveling of module is required

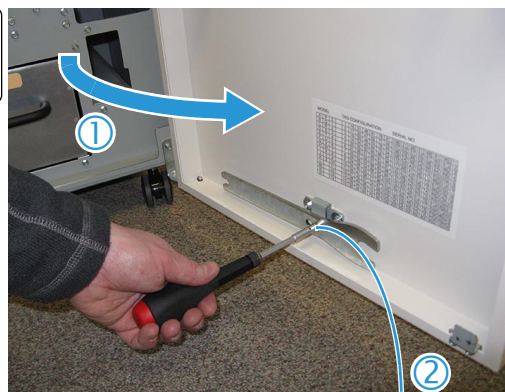



4.6

## 4.3



4.6

## 4.4

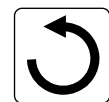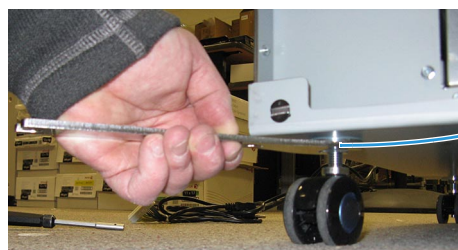


① (X4)




② (X4)



## 4.5

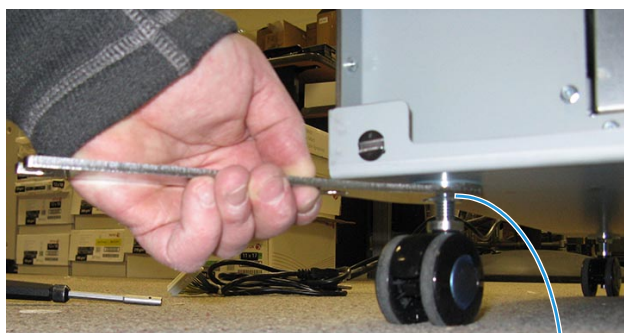

(X4)

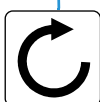

## 4.6



②  
4.3



① 4.2





## 5.0 5.1




## 5.2



Refer to QC5/ (AMS) / 450S03231 (EMEA) docking process within corresponding Installation Instructions or Carrier Manual




## 5.3

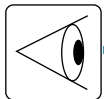

QE4 / 450S03229




702P0XXXX or 607E0XXXX

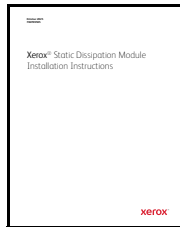



702P09505



## 5.4

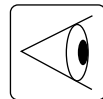

QF8 / 450S03230

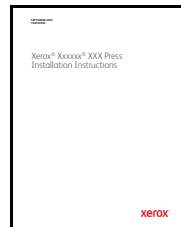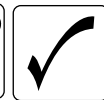


702P0XXXX or 607E0XXXX




702P09504




## 5.5

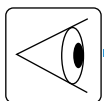

EEQ / 450S03167, GZ8 / 450S03220

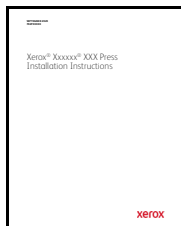


702P0XXXX or 607E0XXXX

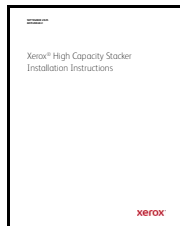


607E28840



## 5.6

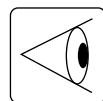

QAK / 450S03166

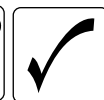



702P0XXXX or 607E0XXXX




607E37790



## 5.7

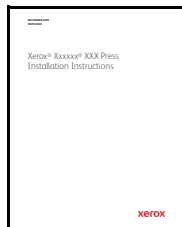
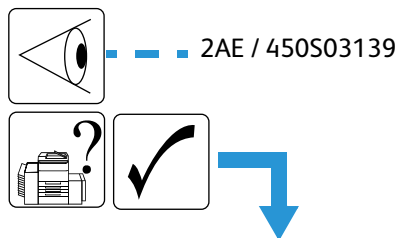


702P0XXXX or  
607E0XXXX

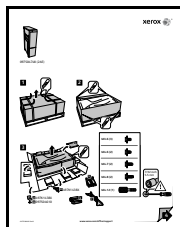


607E19060

## 5.8

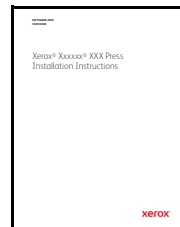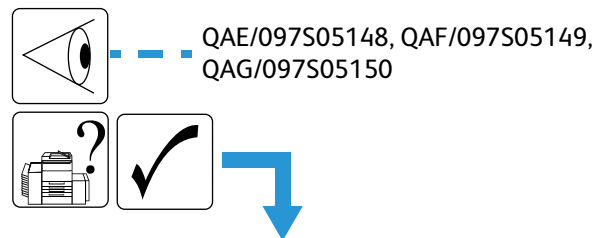

702P0XXXX or  
607E0XXXX

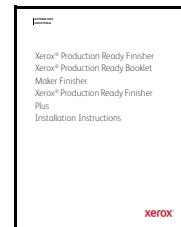

607E37780

