UNPACKING & INSTALLATION INSTRUCTIONS – PLEASE READ!!!

Machine colors may very in the below document.




1. Remove Shrink wrap



2. Cut banding and remove



3.

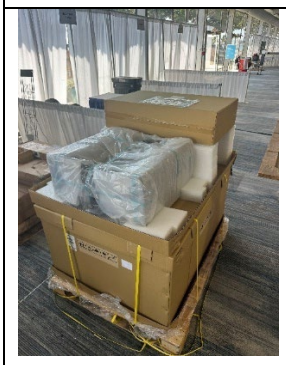


4. Remove top cover and outer box and set accessory box off to the side.



5. Carefully lift feeder and sit on table or floor.



6. Carefully lift stacker and sit on table or floor.

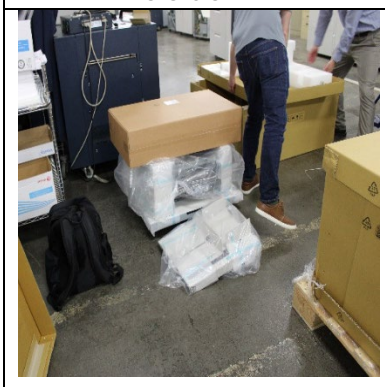


7.



8. Remove cover and outer box




9.

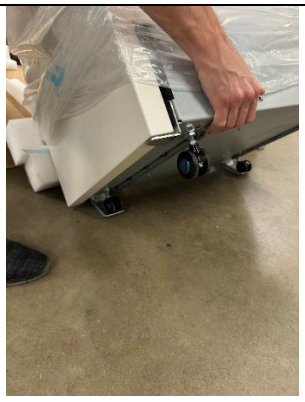 10. Cut foam so it can hing down once you slide edge off skid.	 11. Slide machine and foam support so it hangs off edge. Slide plastic cover to expose casters and plate	 12. Hing down the foam and hold. Slide machine off foam slightly
 13. Carefully lift machine up so it pivots on the metal plates. See next photo	 14.	 15. Remove four bolts to remove the two plates
 16. Roll machine off plates and discard	 17.	 18. Open accessory box and remove hardware. (Some of the hardware will not be used)



19. Cut zip tie and discard

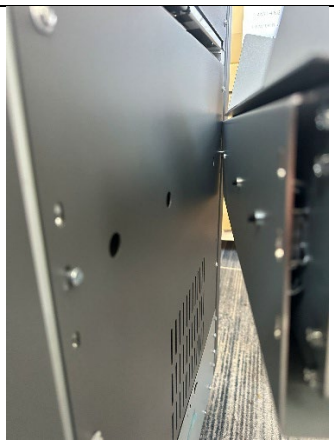


20. Align stacker slot to support pins




21. Install two bolts




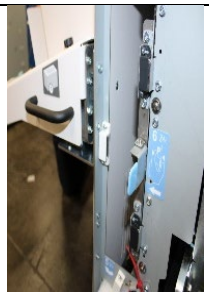

22. Open machines front door and remove the foam and install two bolts into stacker from the inside.

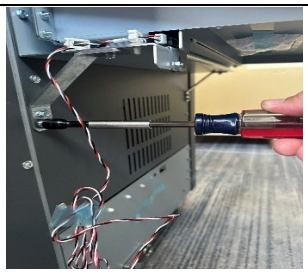

23. Install stacker support brackets on both sides. Six bolts

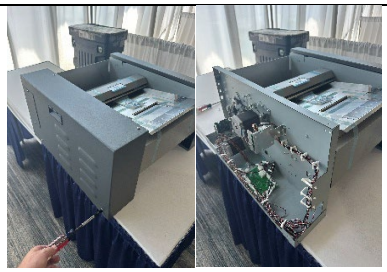

24. Remove the four bolts that hold the side cover on the feeder and remove.




25. Aling feeder with guide pins and support pins, to slots in feeder.



26. Have someone help support the feeder for the next step.



27. Install 2 bolts.

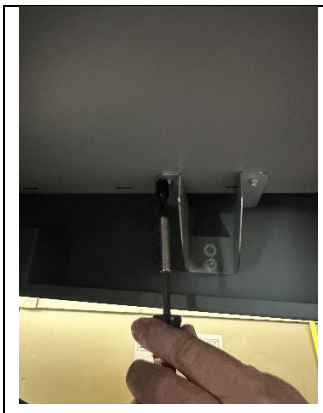


28. Remove two bolts from under the front cover of the feeder.



29. Raise cover up and hold with hand and install 2 bolts.




30. Lower cover and reinstall the two bolts.

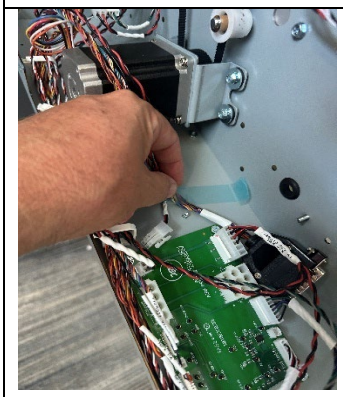


31. Back of feeder install wiring and secure.



32. Snug screws down on data cable and route wires

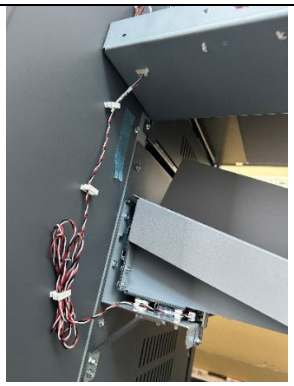

33. Plug in stacker wire and tie up the extra wire

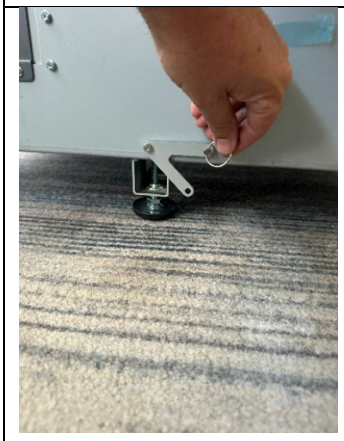

34. Remove pin, lift bracket and pull machine support foot out.



35.



36. Lower bracket back down, to lock support foot. Reinsert pin